

Case cleaning pen

Efficient cleaning – For sapphire crystals and case-backs Ref.: E321000-C / E321000-T

CLEANLINESS CLOSE AT HAND

This innovative pen was developed to facilitate cleaning crystals and case-backs before casing, in production or in After-Sales servicing.

It comes in two versions:

- E321000-C, with a cylindrical end-fitting, for round crystals or case-backs.
- E321000-T, with a triangular/elliptical shape, for an optimal fit on glass or sapphire with a rectangular, tonneau or other shape.

In both cases, this chosen cleaning pen is supplied with a non-slip storage holder. Each one is identifiable thanks to the representative shape of the end-fitting on the end of the handle.

Featuring easy handling due to its ergonomic shape, this product is designed to be able to exert sufficient axial pressure, and prevent risks of MSD (musculoskeletal disorders).

This pen also provides a long service life. Thanks to the velcro system on its end, you can keep hold of the shaped microperforated textile consumables.

The flexibility of the end-fitting, achieved via the mechanical characteristics of the handle, enables it to deform and adapt to the contours of the crystals. The end has the advantage of a flared shape, to prevent contacts on the case middle, causing scratches during work or touching the correctors or lubrication points inside the case middle.



Techniwatch SA

Route de la Jaluse 5b, 2400 Le Locle Tel.: 032 926 19 46 www.techniwatch.ch



U TECHNIWATCH

swiss precision tools

Technical specifications:

- Synthetic handle
- Non-slip stainless steel holder
- Cloth: 100% polyester, microperforated, ISO 4 clean room classification.

Contents:

<u>E321000-C / E321000-T:</u>

- Cleaning pen
- Bag of 10 shaped cloths
- Non-slip holder

Dimensions: Ø 24 x 150 mm + Holder Ø34 x 40 mm

Weight: 245 g

References: E321000-C E321000-T



Case cleaning pen and holder

Case cleaning pen

Product details

APPLICATIONS:

- PRODUCTION TOOL
- AFTER-SALES TOOL

Maintenance advice:

Advantages:

- ➔ Lightweight and ergonomic
- ➔ Reversible and replaceable cloths
- ➔ Long service life
- ➔ Easy to clean
- ➔ Scratch-proof

Advice for changing the consumable:

Press hard in a circular motion to hold the cloth on the velcro. Make sure that it is centred.



Identification E321000-C (visible on the back of the pen)

0


Identification E321000-T (visible on the back of the pen)

Case cleaning pen

Clean the pen body and the holder using

an alcohol wipe and/or a blower.

Accessories

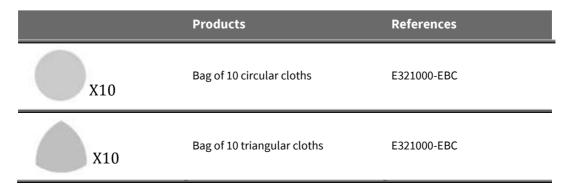



Route de la Jaluse 5b, 2400 Le Locle Tel.: 032 926 19 46 www.techniwatch.ch



Check out our presentation videos on our "Techniwatch SA" Youtube channel Also accessible by scanning the QR code below